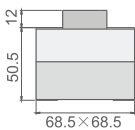 
 
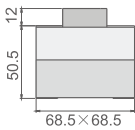 
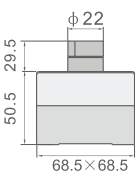 
 
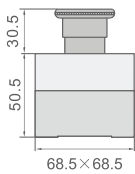 
 
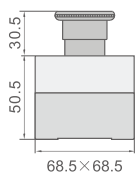 
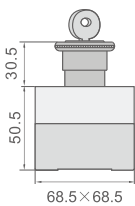 
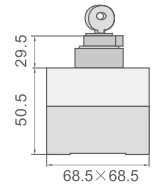 
 
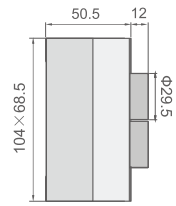 
 
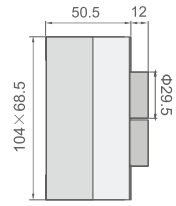 
 
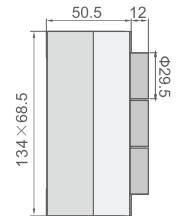 
 
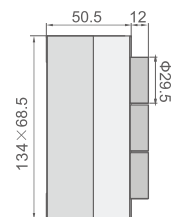 
 


CONTROL SWITCH	DESCRIPTION	CONTACT & HEAD SHAPE	TYPE	CONTOUR
 GX-B101	1 hole control box 1 flush push button Spring return IP40/IP54	 N/O	GX-B101	
 GX-B112	1 hole control box 1 flush push button Spring return IP40/IP54	 N/C	GX-B112	
 GX-B132H29	1 hole control box 1 selector switch 2-position stay put IP40/IP54	 N/O	GX-B142H29	
 GX-B164	1 hole control box 1 Emergency stop Spring return IP40/IP54	 N/C	GX-B164	
 GX-J174H29	1 hole control box 1 Emergency stop Turn to release IP40/IP54	 N/C	GX-J174H29	
 GX-J188H29	1 hole control box 1 Emergency stop Key release IP40/IP54	 N/C	GX-J188H29	

CONTROL SWITCH	DESCRIPTION	CONTACT & HEAD SHAPE	TYPE	CONTOUR
 GX-B142H29	1 hole control box 1 Selector Switch key Operated (Ronis key n° 445) 2-position stay put IP40/IP54	  N/O	GX-B142H29	
 GX-B211H29	2 holes control box 2 flush push button Spring return IP40/IP54	  N/C N/O	GX-B211H29	
 GX-B223	2 holes control box 2 flush push button Spring return IP40/IP54	  N/O N/O	GX-B223	
 GX-B363	3 holes control box 1 pilot light 2 flush push button Spring return IP40/IP54	  N/C N/O	GX-B363	
 GX-B334	3 holes control box 3 flush push button Spring return IP40/IP54	  N/O N/C N/O	GX-B334	
 GX-B339	3 holes control box 3 flush push button Spring return IP40/IP54	  N/O N/C N/O	GX-B339	